
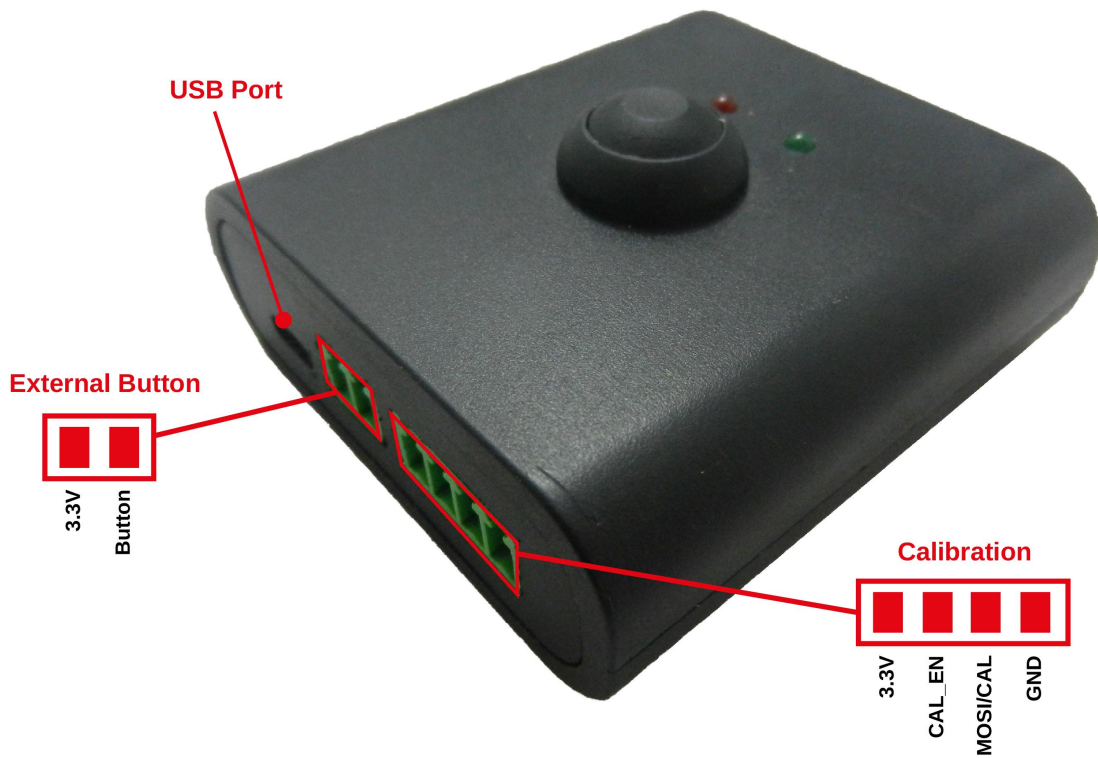


Programmer Manual

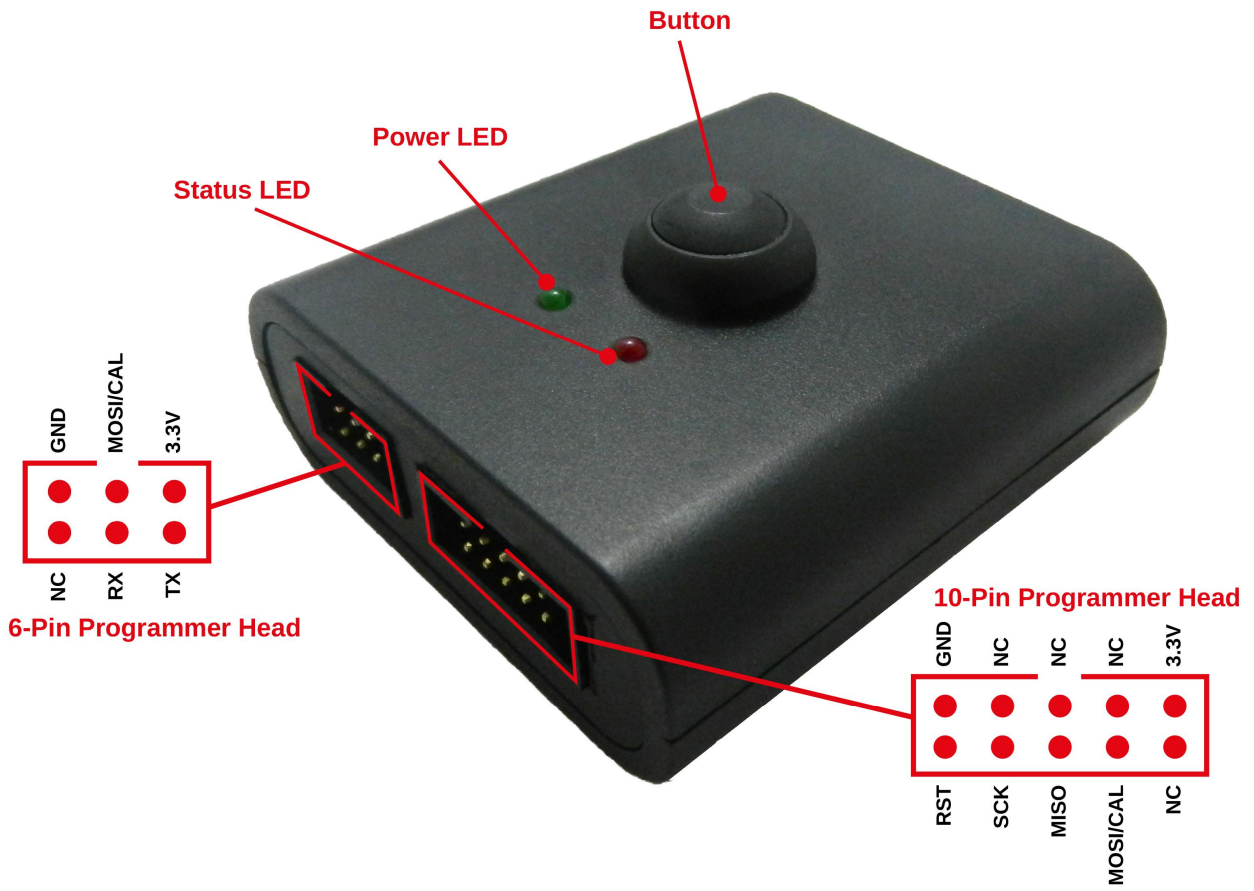

Description

Button:

- not implemented yet

Status Led:

- flashes when the programmer is flashing the device

Power Led:

- is on when the USB connector is connected

6-Pin Programmer Header:

- for serial (UART) programming (i.e. for Chips with a serial Bootloader)

10-Pin Programmer Header:

- for standard SPI programming

USB Port:

- for Micro USB connection

External Button:

- port to connect a second button, same function as onboard button

Calibration Port:

- input for the calibration box.